



2-3. Fish species and measuring points

No.1 Horse mackerel 1  Attachment

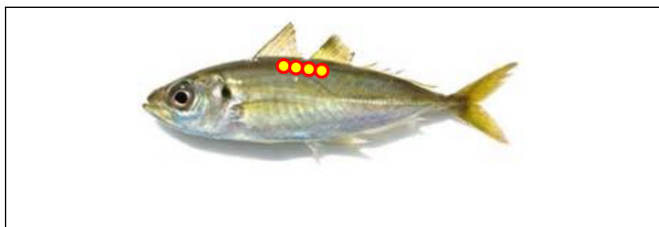


Centering the electrode between the first and second fins, apply the electrode a little above the side line.

No.2 Mackerel 1

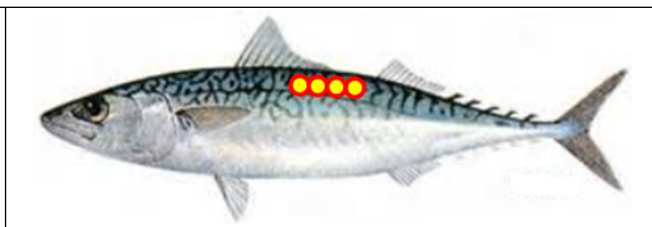


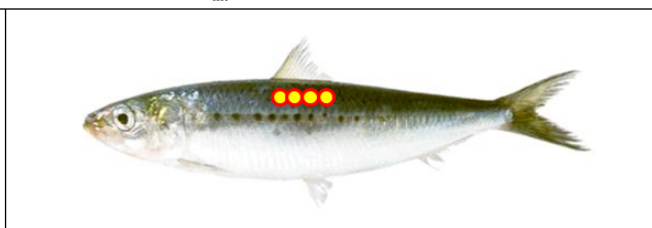
Centering the electrode on the back of the dorsal fin, place the electrode a little above the side line.

No.3 Mackerel 2

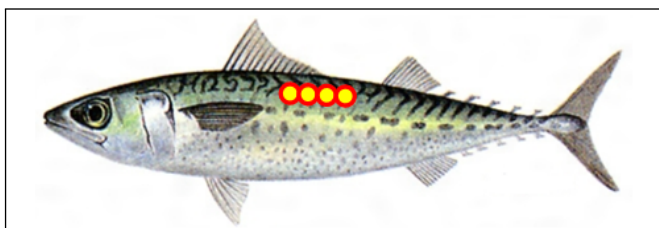


Centering the electrode on the back of the dorsal fin, place the electrode a little above the side line.

No.4 Sardine  Attachment




Centering the electrode on the center of the dorsal fin, place the electrode a little above the side line.

No.5 Saury  Attachment

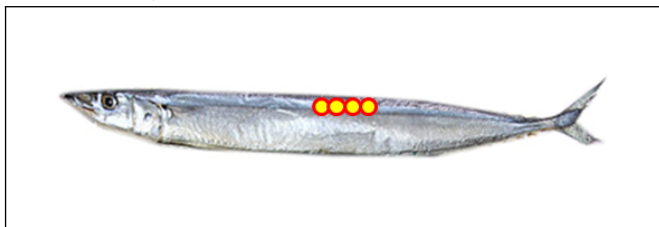


Centering the electrodes on the center of the belly fin, place the electrodes a little above the side line.

No.6 Yellowtail

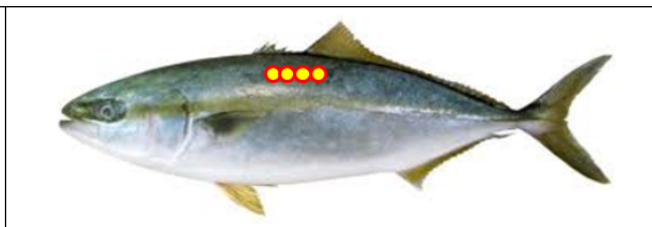


Centering the electrode between the first and second fins, apply the electrode a little above the side line.

No.7-1 Bluefin tuna (back)

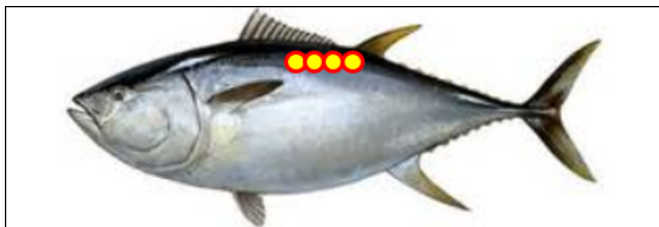


Aligning the tip of the electrode to the back end of the chest fin, place the electrodes a little above the side line.

No.7-2 Bluefin tuna (belly)

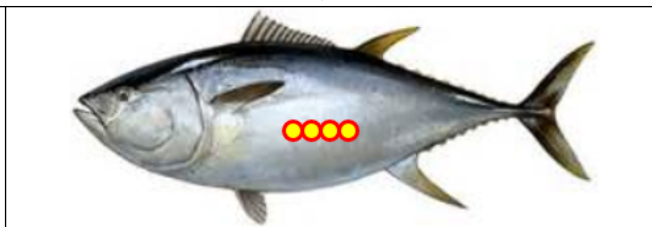


Aligning the tip of the electrode to the back end of the chest fin, place the electrodes between the base of the belly fin and the side line.

No.7-3 Bluefin tuna (tail)

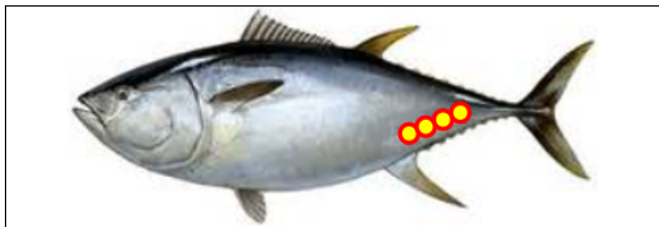

Aligning the tip of the electrode to the back of the anal position, place the electrode slightly below the side line.

No.8 Sea bream

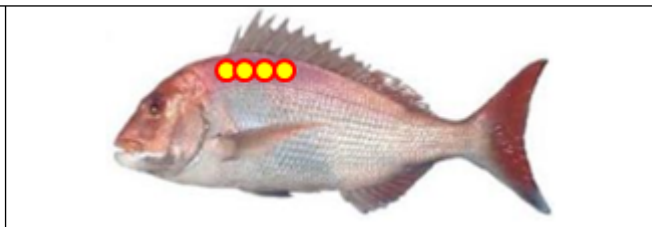









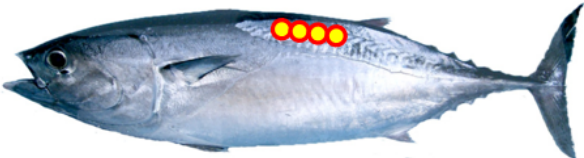



Centering the electrode on the back of the dorsal fin, place the electrode a little above the side line.

No.9 Alfonsino



No.10 Bonito 1

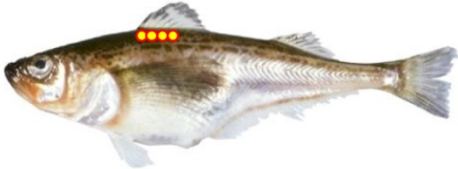
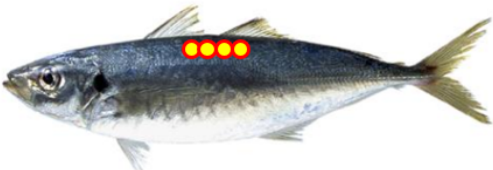
<p>Centering the electrode on the center of the dorsal fin, place the electrode a little above the side line.</p>	<p>Centering the electrode between the first and second fins, apply the electrode a little above the side line.</p>
<p>No.11 Salmon</p>	<p>No.12 Rainbow trout</p>
	
<p>Centering the electrode on the center of the dorsal fin, place the electrode a little above the side line.</p>	<p>Centering the electrode on the center of the dorsal fin, place the electrode a little above the side line.</p>
<p>No.13 Spanish mackerel</p>	<p>No.14 Butterfish</p>
	
<p>Aligning the back of the electrode to the tip of the second fin, place the electrode a little above the side line.</p>	<p>Centering the electrode on the tip of the dorsal fin, place the electrode a little above the side line.</p>
<p>No.15 Sea bass</p>	<p>No.16 Sailfin sandfish  Attachment</p>
	
<p>Align the back of the electrode to the back end of the 1st fin, place the electrode a little above the side line.</p>	<p>Centering the electrode on the tip of the dorsal fin, place the electrode a little above the side line.</p>
<p>No.17 Grouper</p>	<p>No.18 Bonito 2</p>
	
<p>Centering the electrode on the tip of the dorsal fin, place the electrode a little above the side line.</p>	<p>Centering the electrode between the first and second fins, apply the electrode a little above the side line.</p>
<p>No.19 Sea eel  Attachment</p>	<p>No.20 Horse mackerel 2</p>
	
<p>Straightening the fish, aligning the tip of the electrode to the anal position, place the electrode slightly above the lateral line.</p>	<p>Centering the electrode between the first and second fins, apply the electrode a little above the side line.</p>